

Using Your StowMaster™

StowMaster®

Premium products for the great outdoors.™




1 Locate the small nylon loop at the closed end of the bag and secure it or step on it with your foot. Hold the handle and pull swiftly straight up.

(With optional stow case only.)



2 Hold the net at a downward angle with the spring buttons and logo facing up. Unfold the hinged hoop.

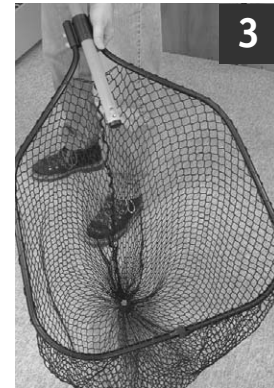

3 Open and slide down yoke until button snaps in place. No need to depress a button to open.



4 The end of the extension will stop at the first notch. *No need to depress the end button.*



5 For models with extensions, depress the button near the grip and pull the extension until the button snaps into place.

Closing the StowMaster™



1 To close, reverse the process. Depress the button near the grip and push the extension until the button snaps into place.



2 Depress the button near the yoke and push the extension until it contacts the hinge (C).



3

NOTE: The StowMaster® should always be used right side up (logo and buttons up). When used upside down, the hinge is not at maximum strength.

The end of the extension must contact the hinge (2C) for the hoop to fold. Wrap the net around the hoop and return net to case.

Replace Netting



1 Hold the StowMaster™ upside down




2 Reverse netting through hoop and remove zip ties




3

A

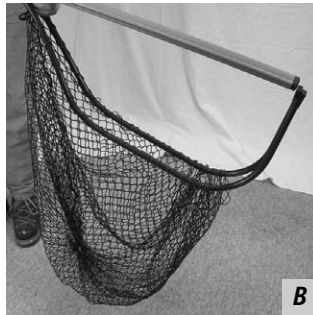

B

Push extension to meet hinge, allowing hoop to fold

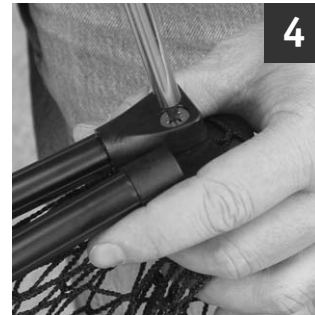

4

Remove hinge end screw



5

Slide netting off hoop

Replace netting using reverse order of instructions

Secure new netting with zip ties

StowMaster™

Premium products for the great outdoors.™

Premium products for the great outdoors.™

505 West Front Street, Albert Lea, Minnesota 56007

Toll Free 800-520-5910 www.stowmaster.net